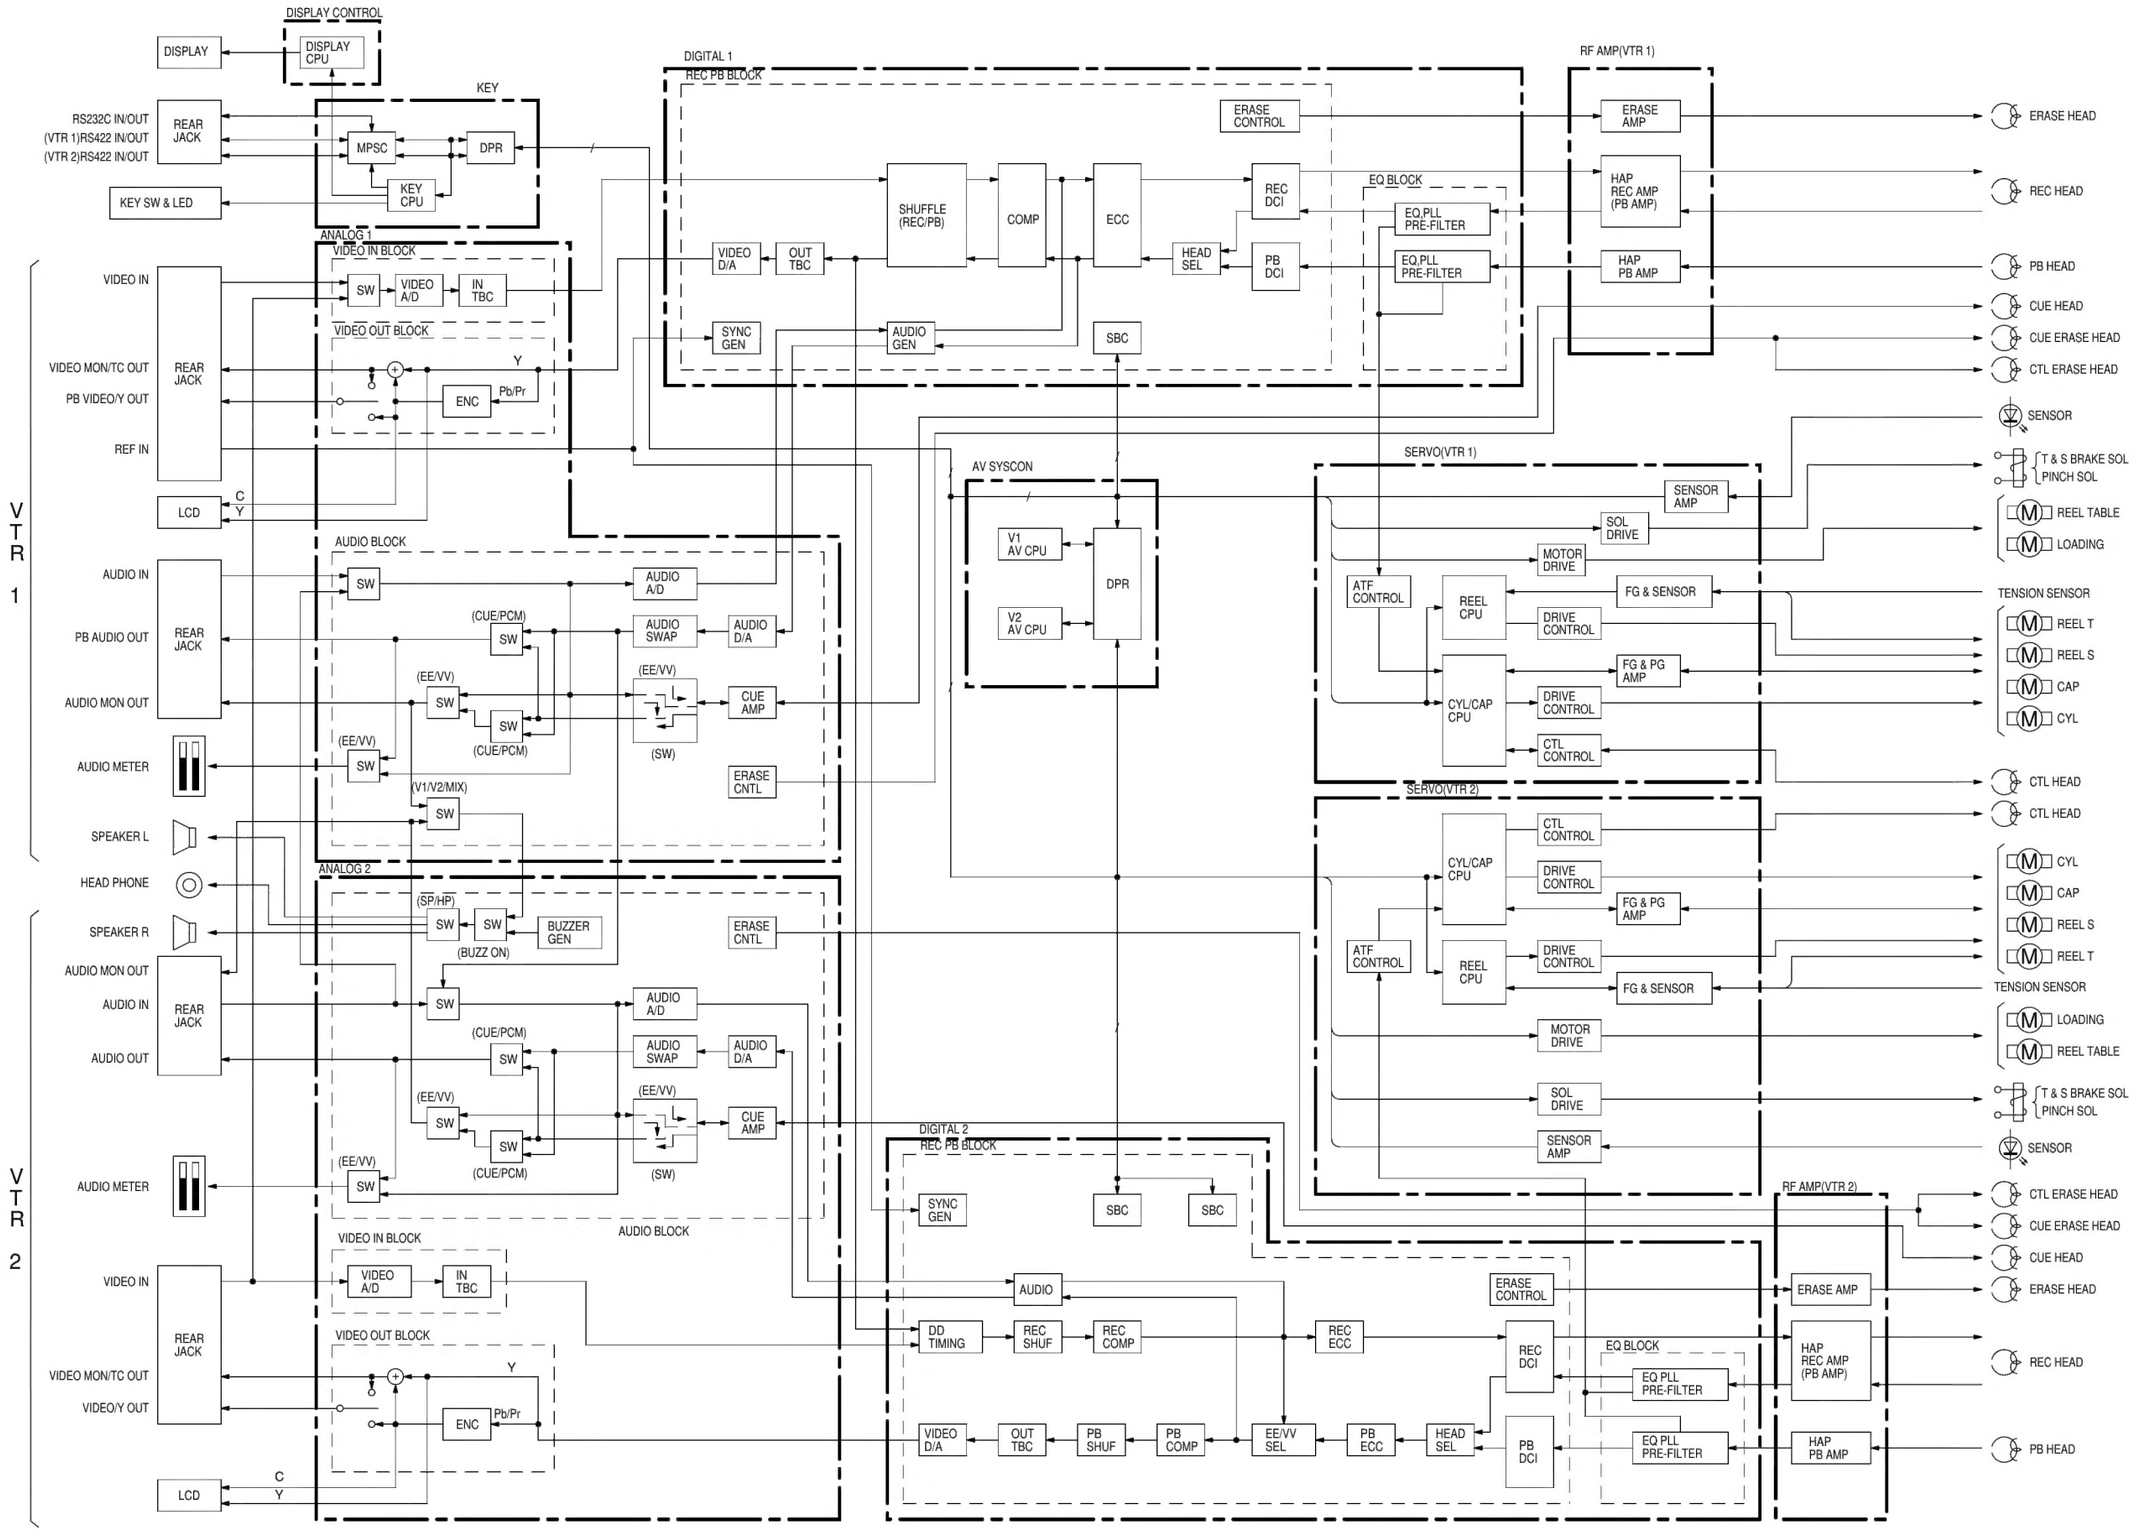
VTR 1
VTR 2
DISPLAY CONTROL
DISPLAY
DISPLAY CPU
KEY
RS232C IN/OUT
(VTR 1)RS422 IN/OUT
(VTR 2)RS422 IN/OUT
REAR JACK
MPSC
DPR
KEY CPU
KEY SW & LED
DIGITAL 1
REC PB BLOCK
ERASE CONTROL
SHUFFLE (REC/PB)
COMP
ECC
REC DCI
HEAD SEL
PB DCI
EQ BLOCK
EQ,PLL PRE-FILTER
VIDEO D/A
OUT TBC
SYNC GEN
AUDIO GEN
SBC
RF AMP(VTR 1)
ERASE AMP
HAP REC AMP (PB AMP)
HAP PB AMP
ERASE HEAD
REC HEAD
PB HEAD
CUE HEAD
CUE ERASE HEAD
CTL ERASE HEAD
ANALOG 1
VIDEO IN BLOCK
VIDEO IN
SW
VIDEO A/D
IN TBC
VIDEO OUT BLOCK
VIDEO MON/TC OUT
PB VIDEO/Y OUT
REF IN
ENC
Pb/Pr
Y
C
LCD
AUDIO BLOCK
AUDIO IN
PB AUDIO OUT
AUDIO MON OUT
AUDIO METER
SPEAKER L
HEAD PHONE
SPEAKER R
AUDIO A/D
AUDIO SWAP
AUDIO D/A
(CUE/PCM)
(EE/VV)
CUE AMP
(SW)
ERASE CNTL
(V1/V2/MIX)
ANALOG 2
(SP/HP)
BUZZER GEN
(BUZZ ON)
AUDIO MON OUT
AUDIO IN
AUDIO OUT
AV SYSCON
V1 AV CPU
V2 AV CPU
DPR
SERVO(VTR 1)
SENSOR AMP
SOL DRIVE
MOTOR DRIVE
ATF CONTROL
REEL CPU
DRIVE CONTROL
FG & SENSOR
CYL/CAP CPU
FG & PG AMP
CTL CONTROL
SERVO(VTR 2)
SENSOR
T & S BRAKE SOL
PINCH SOL
REEL TABLE
LOADING
TENSION SENSOR
REEL T
REEL S
CAP
CYL
CTL HEAD
DIGITAL 2
REC PB BLOCK
SYNC GEN
SBC
AUDIO
DD TIMING
REC SHUF
REC COMP
REC ECC
VIDEO D/A
OUT TBC
PB SHUF
PB COMP
EE/VV SEL
PB ECC
HEAD SEL
RF AMP(VTR 2)